



CERES GEN6

APPLICATION
INSTRUCTIONS



HOW TO APPLY >

PRECAUTIONS



Do not use existing ear tag holes. Application of the CERES GEN6 device in these existing holes could lead to damaging the ear.



Secondary components are sharp. Please exercise caution when handling.



Use best biosecurity hygiene practices.



For CERES GEN6 products only.



Once activated, the device must remain in sunlight and within operating temperatures to maintain optimal use.

If you have any further queries, please visit our FAQ page at
cerestag.com/faq

PRODUCT COMPONENTS KEY




DEVICE



SECONDARY COMPONENT

OPTIONAL ACCESSORIES

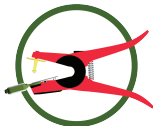

APPLICATOR



CLAMP



**ACTIVATION
TOOL**

REGISTER THE DEVICE

BEFORE APPLICATION

Getting Started with CERES TAG!

It's as easy as: ☒ **REGISTER**
☒ **CHARGE**
☒ **APPLY**

Before you take your devices out of their packaging, head to <https://portal.cerestag.com/register> and register your devices using the QR code on the box.



CHARGING THE DEVICE

BEFORE APPLICATION



Before applying, ensure the CERES GEN6 devices have had sufficient opportunity to charge. Place your devices in the sun with the solar panel (front of device) up.

CHARGING THE DEVICE

BEFORE APPLICATION




While the **BLUE** LED light is flashing, this indicates that the device is still charging and is not ready to be deployed onto your herd.

Once the LED starts flashing **GREEN**, the device has reached optimal charge and has been activated. This device is now ready to be applied to your cattle.

OPTIONAL MANUAL ACTIVATION

NOTE: This step only needs to be completed if you have not let the devices charge until optimal battery level reached and green light can be seen. If devices must be activated before fully charged you can do it manually following the steps below.

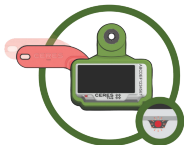

Use the Activation Tool and hold it flush against the device for up to 20 seconds.

The **RED** LED will flash slowly when properly activated.

APPLYING THE DEVICE

STERILISE

STEP 1



Dip or spray the Secondary Component with antiseptic solution.

Use antiseptic solution at recommended dilution.

Note: Failure to do so may cause irritation.

INSERT COMPONENT

STEP 2



Slide Secondary Component onto the
Applicator Pin.

Hold down the metal clamp and insert the Device face down
into the Applicator.

REMOVE OTHER TAGS

STEP 3



Remove all other tags* and ensure there is sufficient space in the ear for the CERES GEN6 device.

* this excludes regulatory tags.

IMPORTANT INFORMATION BEFORE THE NEXT STEP

You must apply the device to the animal's left ear. It must be applied to the front of the ear with no other tags in the same ear.

APPLY

STEP 4



Locate the correct position in the upper-middle area of the ear between the two visible cartilage tendons.

The tag must go on the front of the animals LEFT ear, and must not be applied beside any other flag tag.

Squeeze the Applicator handles firmly until there is an audible click, then release.

Note: Solar panels must be facing outwards.

CONGRATULATIONS

DONE



Your CERES GEN6 device is now active and applied.

To view your data, log into your Software Provider.

REUSE



Clean any debris from the device before reuse.

Repeat steps 1 to 4.

Note: Ensure the CERES GEN6 devices are charged in full sunlight before reuse.

HAVE QUESTIONS?



Scan me to find all
the answers to your
questions!



<https://cerestag.com/pages/faqs>

CERES TAG, the CERES TAG logo, and CERES TAG product names mentioned are trademarks of CERES TAG LTD, registered in Australia and other countries.